

# Service 235 - CUTTING



Cutting

item	Order No.
hose cut along the spiral	235-0000-0000
vertical hose cut	235-0000-0800
cutting, insulation remove, turn wire into hose	235-0000-0900
leading-out wire out of the sprue	235-0000-0901
wire bending (without insulation remove)	235-0000-0902

Overpressure and underpressure are recommended threshold operating values, products can be subjected to higher loads upon request. The bending radius is measured through the inside of the hose arch. The right to make technical modifications is reserved. All values determined at 20°C and are approx. data. Additional information at [www.norres.com/en/technology/](http://www.norres.com/en/technology/).