

# CONNECT TANK TRUCK BRASS 252



Brass tank truck coupling

## Applications

- silo, silo vehicle/ silo truck, tanker/ tank truck: silo charging, silo discharging
- for conveying of dry media and liquids

## Properties

- according to EN 14420 -6
- Not to be used for explosive fluids group 1 and not according to pressure equipment directive

- REACH according to --> Technology / Technical Information / REACH

## Design

- material: brass

Size (in)	Weight (lb/pcs)	Suitable for hose I.D. (in)	Order No.
<b>replacement lip-seal for type MC, NBR black</b>			
1.969	0.198	-	252-0050-8068
3.150	0.044	-	252-0075-8068
3.937	0.044	-	252-0100-8068
<b>replacement thread-seal, PU black</b>			
1.969	0.007	-	252-0050-8078
3.150	0.011	-	252-0075-8078
3.937	0.020	-	252-0100-8078
<b>3) Type FC with inner thread ("coupling female/ piston ring / crown piece"), incl. clamping ring with lever</b>			
1.969	1.477	-	252-0050-8297
3.150	2.580	-	252-0075-8297
3.937	3.793	-	252-0100-8297
<b>4) Type MC with inner thread ("coupling male / curved piece")</b>			
1.969	0.684	-	252-0050-8497
3.150	1.654	-	252-0075-8497
3.937	2.492	-	252-0100-8497
<b>1) Hose adapter with outer thread, corrugated nozzle for band clamp fitting; suitable to CONNECT 229 CLAMP ASSEMBLY</b>			
1.969	0.728	50	252-0050-8813
3.150	1.874	75	252-0075-8813
3.937	4.498	100	252-0100-8813
<b>2) Hose adapter with outer thread, smooth nozzle and locking ring for clamp shell band fitting; suitable to CONNECT 231 SAFETY CLAMP ASSEMBLY</b>			
1.969	0.750	50	252-0050-8823
3.150	1.830	75	252-0075-8823
3.937	3.594	100	252-0100-8823

Positive and negative pressure ratings are the recommended maximum operating values. Products can be manufactured to meet higher operating values upon request. The bend radius is calculated from the center of the hose in an arched position. Additional information at [www.norres.com/us/technology/](http://www.norres.com/us/technology/). NORRES reserves the right to modify technical data at any time. Technical data based on tests at 68°F and are approx. values. Proper use and maintenance of NORRES hoses is the sole responsibility of purchaser and ultimate user of the product. The individual conditions, applications and the number of variables make firm recommendations technically impossible. This information is intended as a general guide only.

# CONNECT TANK TRUCK BRASS 252

## Accessories



CONNECT SAFETY  
CLAMP ASSEMBLY 231



CLAMP 216



CLAMP 212



CLAMP 211



CONNECT 230

Positive and negative pressure ratings are the recommended maximum operating values. Products can be manufactured to meet higher operating values upon request. The bend radius is calculated from the center of the hose in an arched position. Additional information at [www.norres.com/us/technology](http://www.norres.com/us/technology). NORRES reserves the right to modify technical data at any time. Technical data based on tests at 68°F and are approx. values. Proper use and maintenance of NORRES hoses is the sole responsibility of purchaser and ultimate user of the product. The individual conditions, applications and the number of variables make firm recommendations technically impossible. This information is intended as a general guide only.